

TIPS OF THE TRADE



HOW CAN YOU TELL IF YOUR BLAST NOZZLE IS WORN?



MEASURE NOZZLE WEAR WITH A 'NOZZLE ANALYSER GAUGE'

- 1) Remove the marker from the cap of the gauge.
- 2) Use the small black marker to colour a line on the side of the gauge.
- 3) Now insert the gauge into the threaded end of the blast nozzle and twist it.
- 4) The nozzle orifice size is revealed by aligning the etched line in the black mark drawn on the side of the gauge to the scale on the gauge.
Air consumption (CFM @ 100 psi) is also indicated.

NEW VENTURI NOZZLE - NO. 6

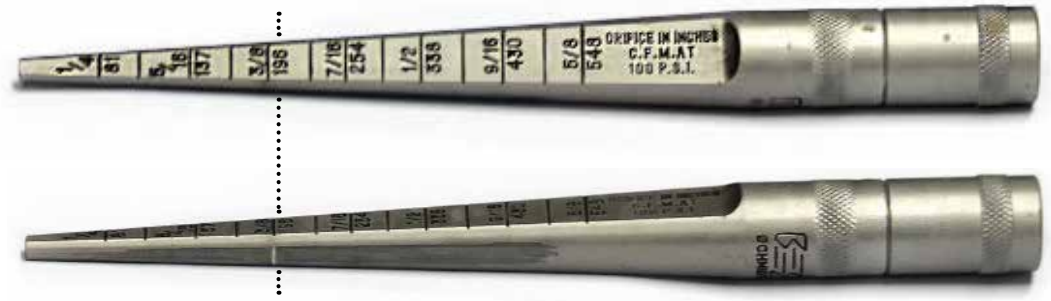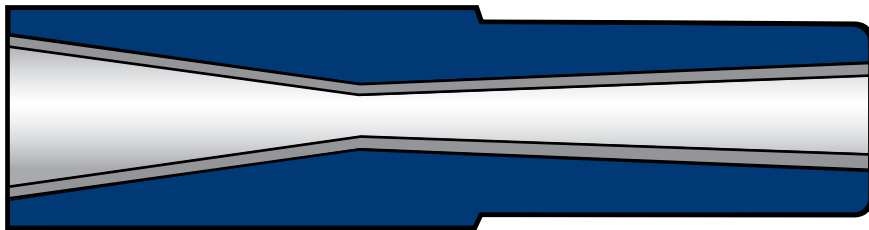

WORN VENTURI NOZZLE - NO. 6

